

# PLANNING & APPLICATION UNI-RIVET MANUAL

Australia & New Zealand



#### Disclaimer

The information in this manual is by no means exhaustive. This document has been developed to assist with the correct preparation and installation of EQUITONE panels. For full and detailed information about storage, handling, preparation, and design and installation requirements of EQUITONE, refer to EQUITONE Design and Installation Guide and other available and relevant EQUITONE technical documents.

Refer to EQUITONE Material Safety Data Sheets (MSDS) or Safety Information Sheets (SIS) for more information about health and safety, including common hazards associated with working with EQUITONE, and measures to minimise risk.

The information in this document is correct at the time of issuing. However, due to our committed program of continuous material and system development we reserve the right to amend or alter the information contained in this document without prior notice. Please contact your local EQUITONE sales organisation or visit www.equitone.com to ensure you have the most current version.

This document is supplied in good faith and no liability can be accepted for any loss or damage resulting from its use. Images and construction details contained in this document are not to a specific scale, and are indicative and for illustration purposes only.

This document is protected by International copyright laws. Reproduction and distribution in whole or in part without prior written permission is strictly prohibited. EQUITONE and logos are trademarks of Etex NV or an affiliate thereof. Any use without authorisation is strictly prohibited and may violate trademark laws.

1

### TABLE OF CONTENTS

#### **TOOLS & ACCESSORIES**

Page 3

#### STORAGE & HANDLING

Page 4-6



#### PANEL CUTTING

Tools, Page 7

Panel cutting, Page 8



#### PANEL EDGE TREATMENT

Tools, Page 9

Panel edge treatment, Page 10-12



#### PANEL DRILLING

Tools, Page 13

Panel drilling, Page 14-15

Panel drilling EQUITONE [lines], Page 16-17



#### **UNI-RIVET FIXING**

Tools, Page 18

UNI-Rivet fixing, Page 19-22



#### **VENTILATION**

Page 23




#### **INSTALLATION**

Page 24-26




### **TOOLS & ACCESSORIES**

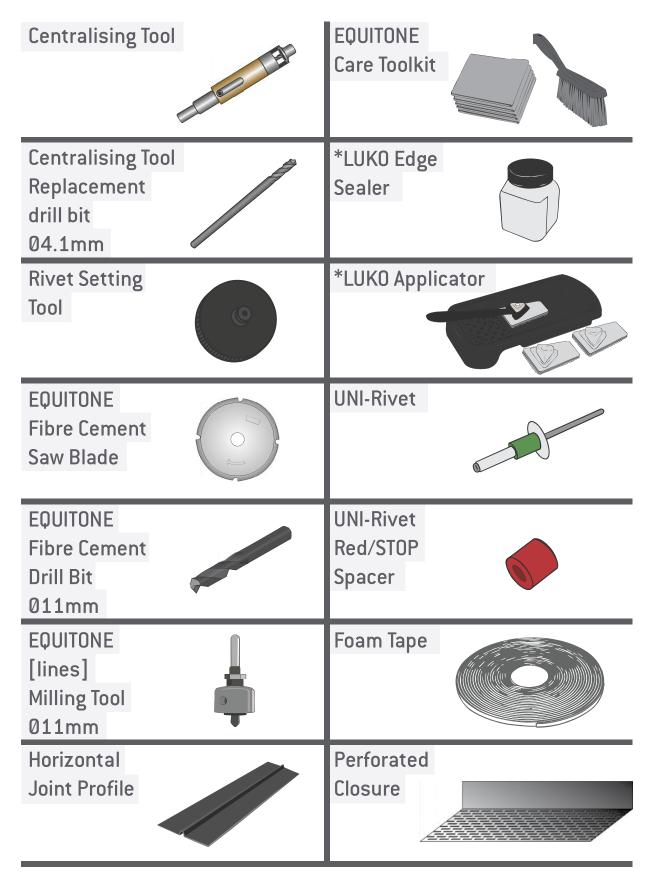


<sup>\*</sup>Only for EQUITONE [natura] PRO & [natura]

# STORAGE & HANDLING

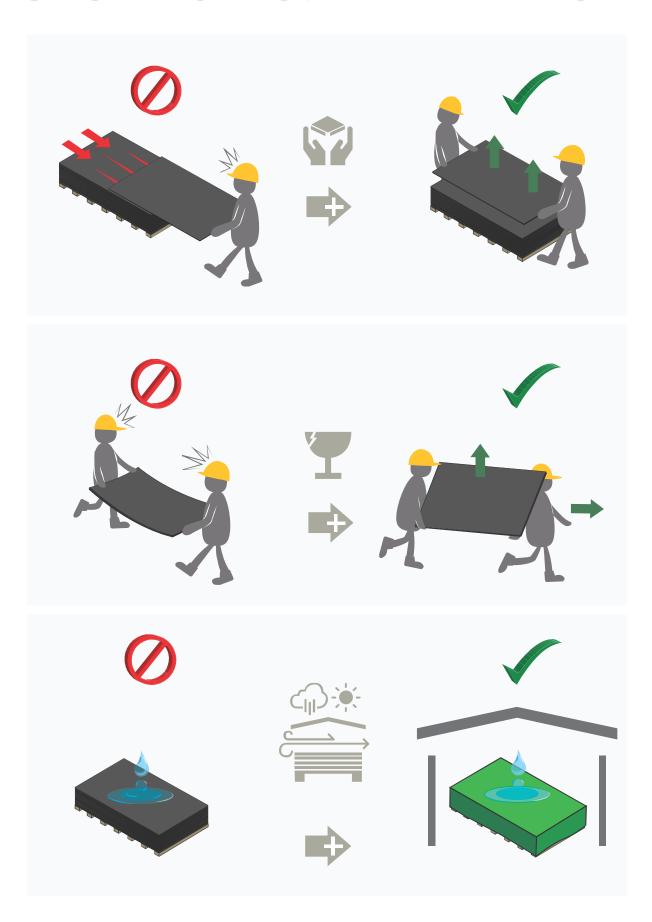




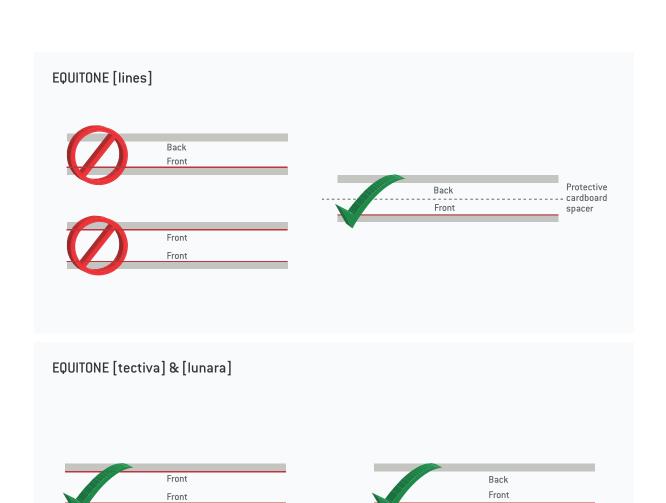




# PANEL CUTTING


### TOOLS

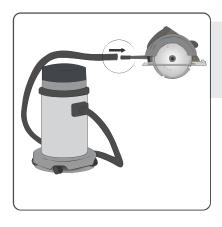

Dust extraction system

EQUITONE fibre cement saw blade

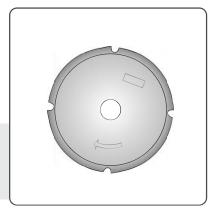

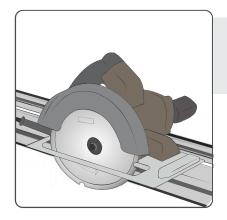

Circular saw & Guide rail


Styrofoam film blade





Stable Work Table With Sacrificial Board blade

# PANEL CUTTING

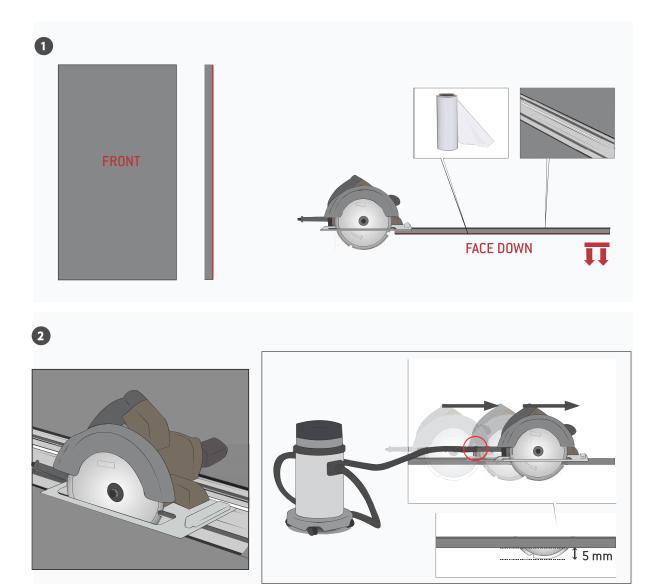

### PANEL EDGE TREATMENT


#### TOOLS



Sandpaper (80 Grit)

Soft bristle brush



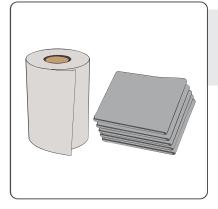


Micro fibre cloth, paper towel

LUKO edge sealer & applicator


\*For EQUITONE [natura] & [natura] PRO




# PANEL EDGE TREATMENT

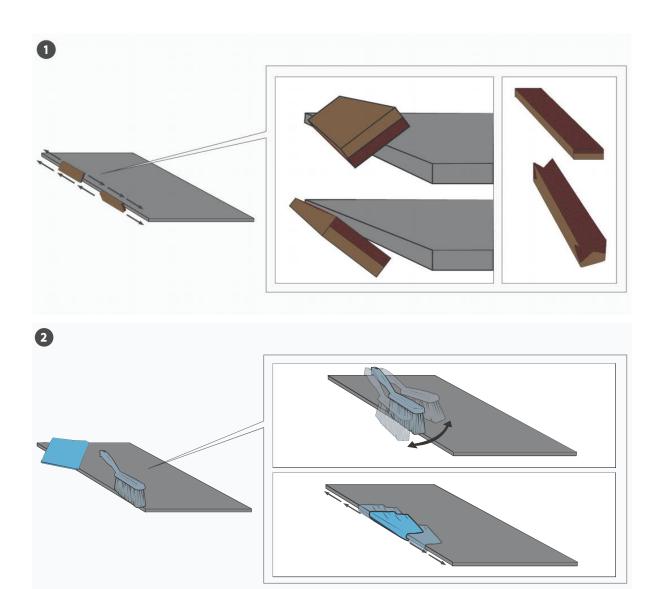


Steps 3 to 7: Only applicable to EQUITONE [natura] & [natura] PRO

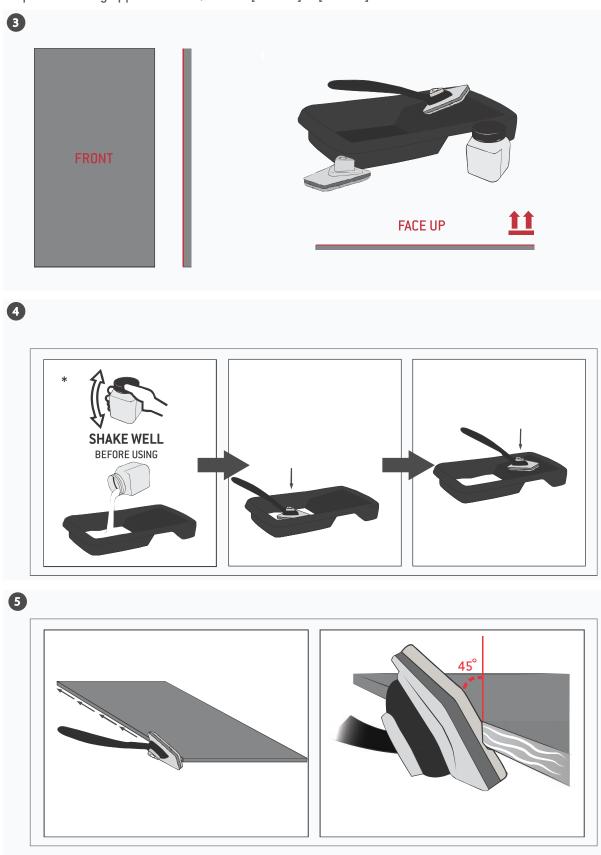


 $<sup>\</sup>ensuremath{^{*}}$  Pour only enough LUKO into the tray that can be used within 30 minutes.

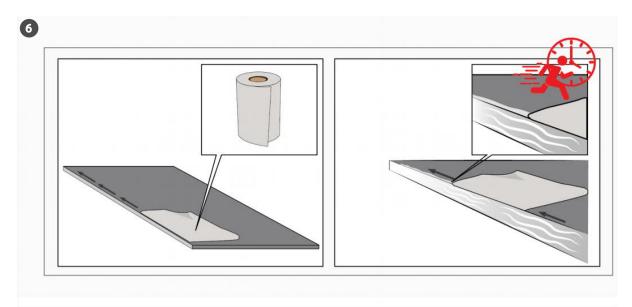

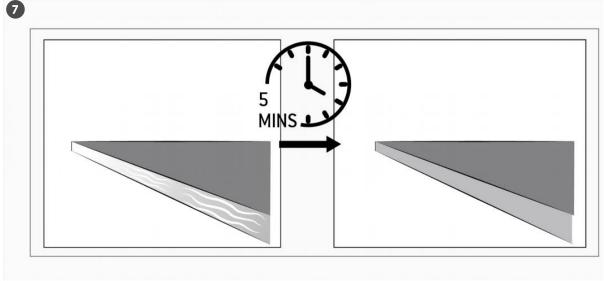

### PANEL DRILLING

#### TOOLS

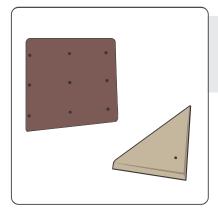

Hole Template (Optional)


EQUITONE Drill Bit 11mm Diameter





G Clamp (Optional)


EQUITONE [lines]
milling tool
11mm Diameter

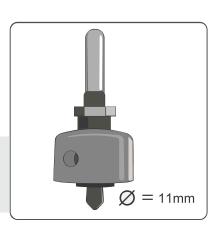





Stable Work Table With Sacrificial Board/Fibre Cement

Micro Fibre Towel & Brush

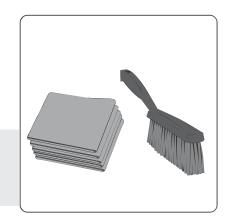



# PANEL DRILLING

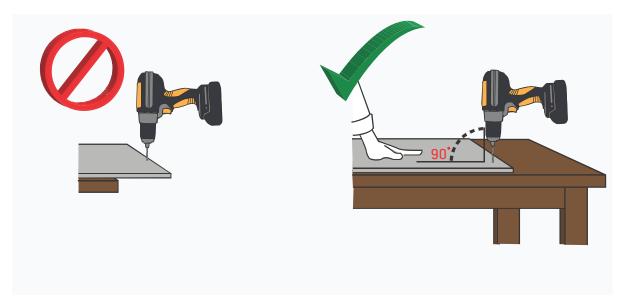


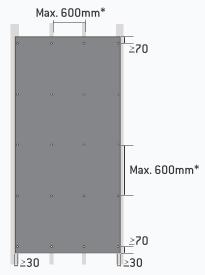

\*The distance reduces on higher wind load requirements Max. 400mm for ceiling/soffit applications.

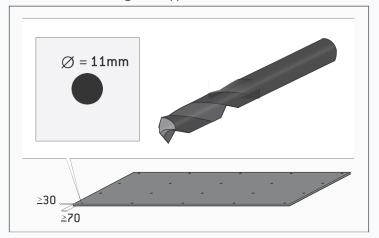


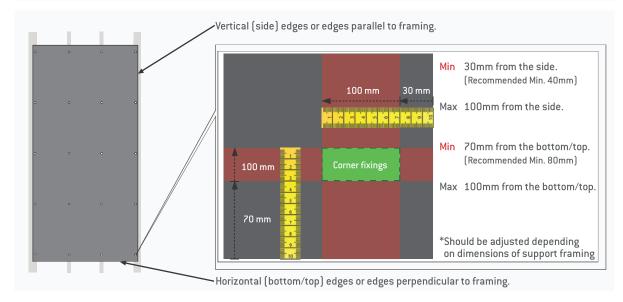


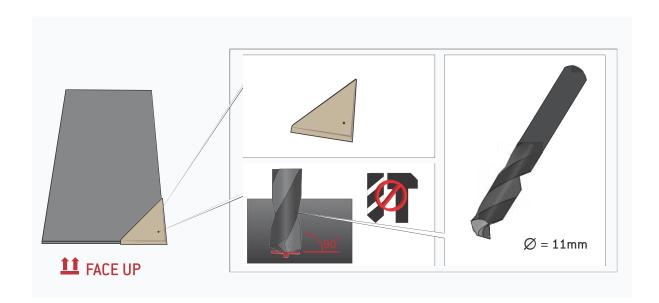


# PANEL DRILLING

### EQUITONE [lines]

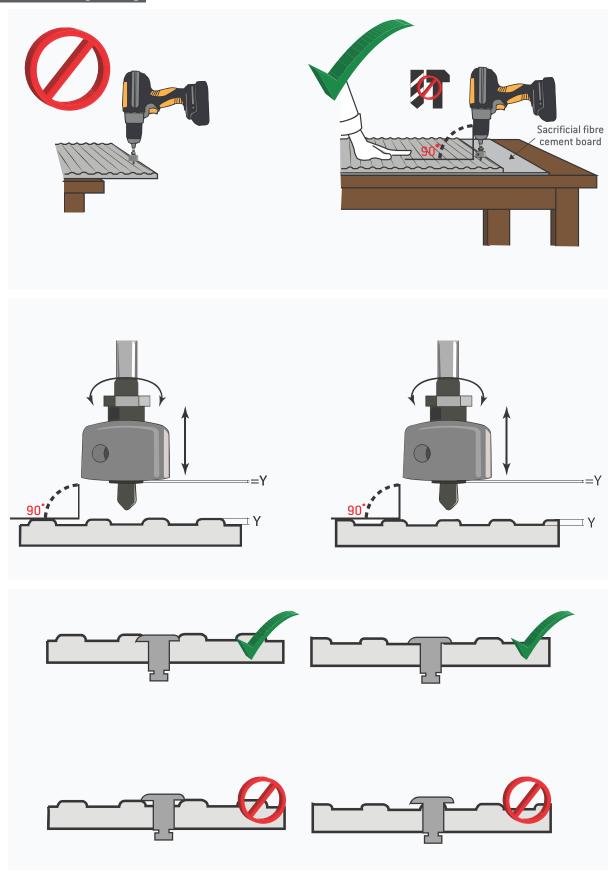


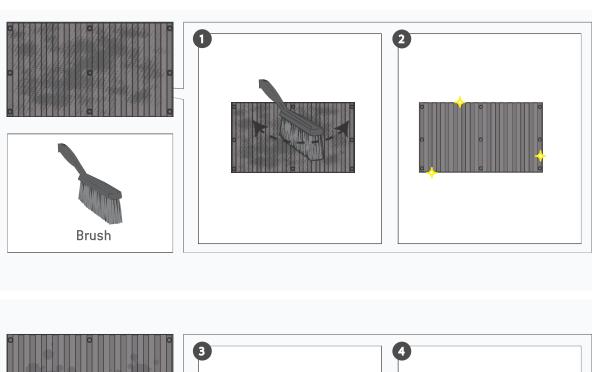


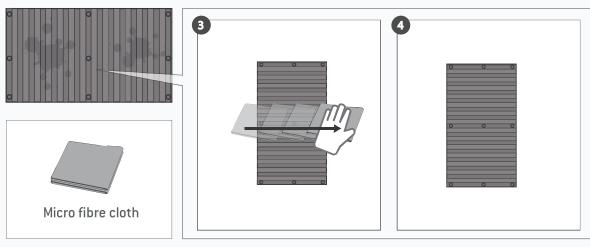

# UNI-RIVET FIXING


#### TOOLS

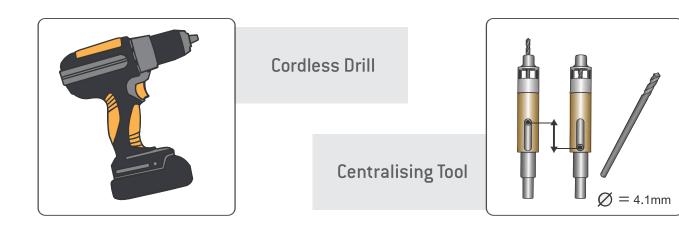


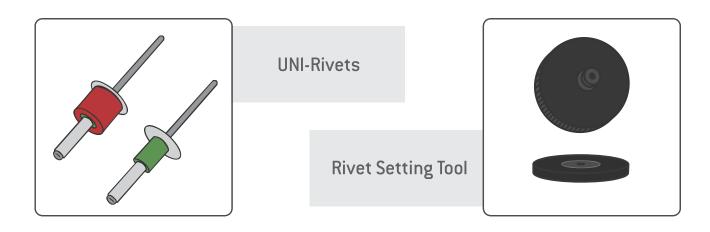






### UNI-RIVET FIXING

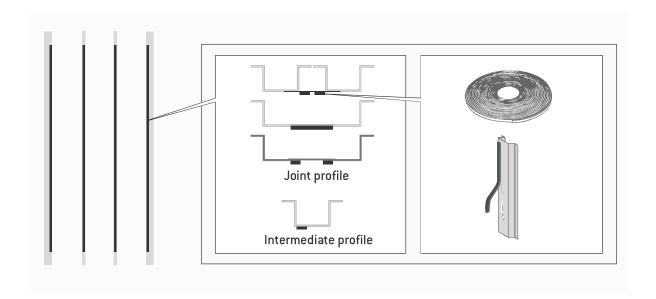


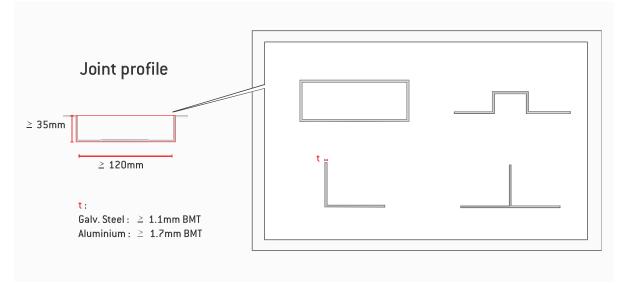

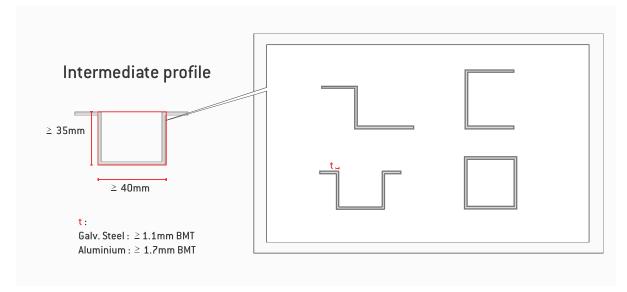


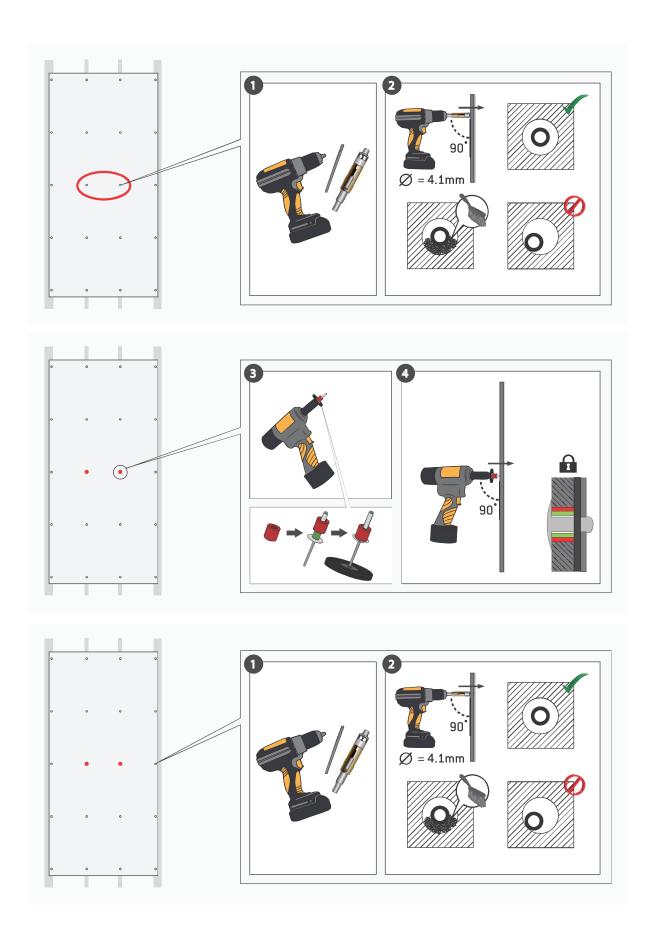

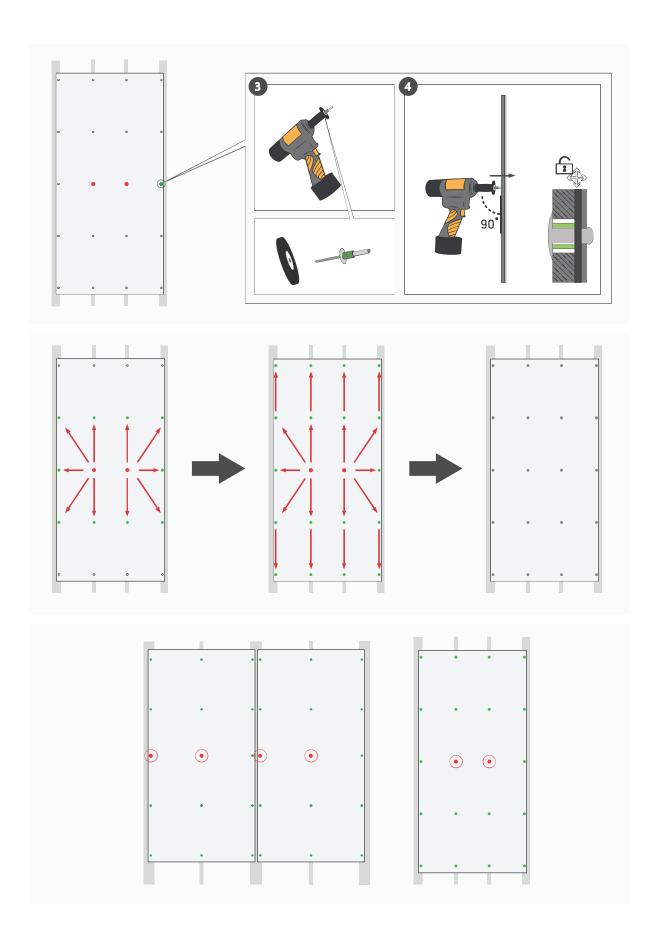

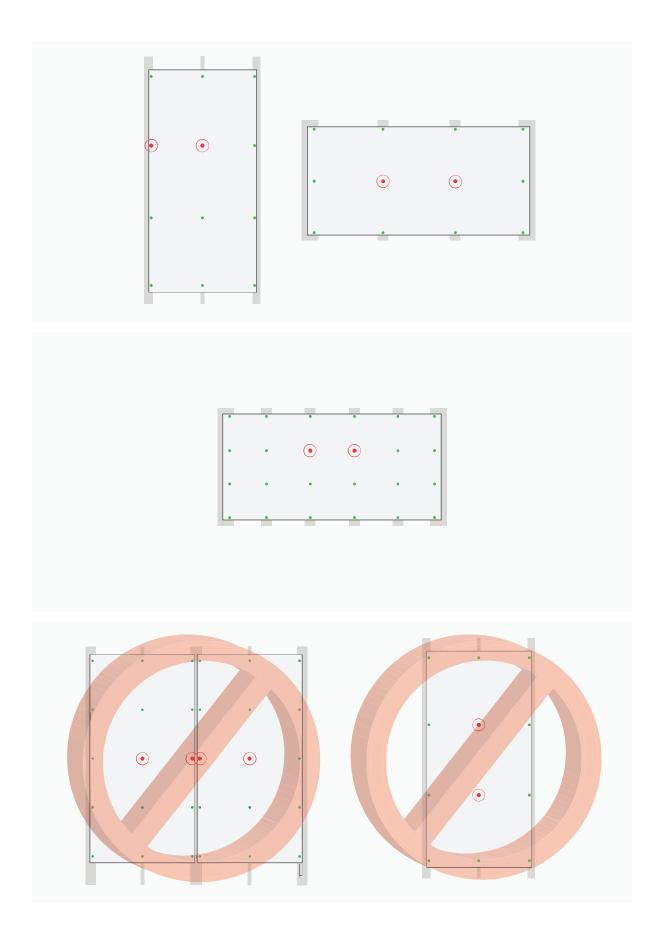



### **VENTILATION**

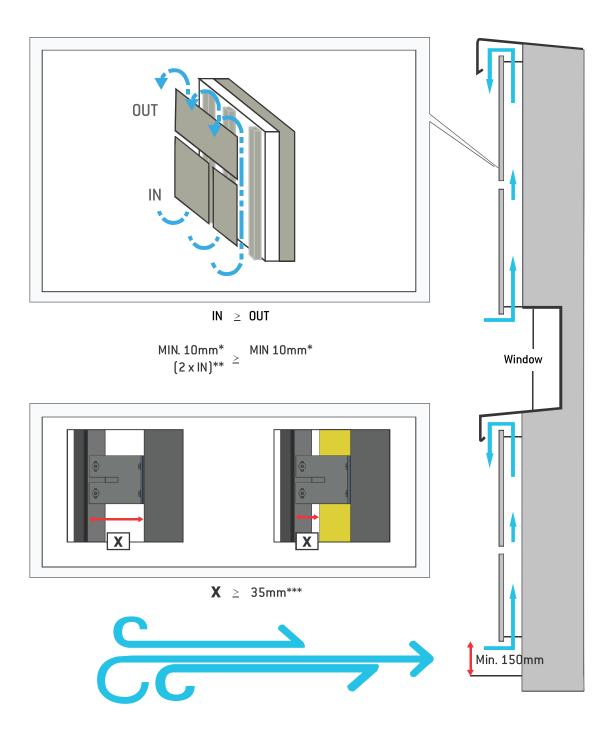



- \* Refer to other relevant EQUITONE technical documents for the recommendations on the minimum sizes of ventilation inlets and outlets as well as minimum ground clearances.
- \*\* If perforated closure profile is used.
- \*\*\* Cavity space X increases as the height of the facade & vertical distance IN & OUT increases. Refer to the Design and Installation Guide for further information.

# INSTALLATION

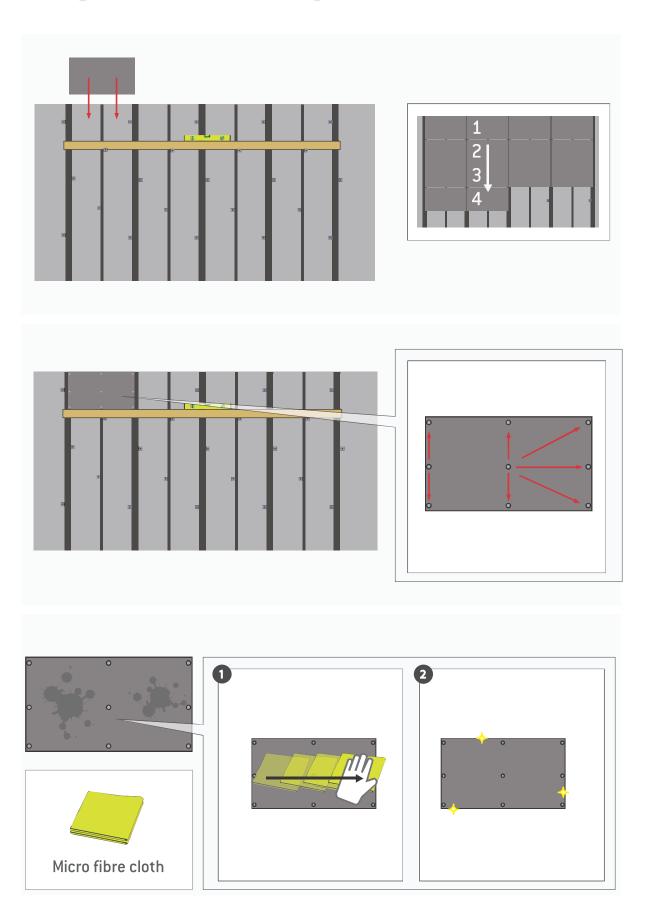


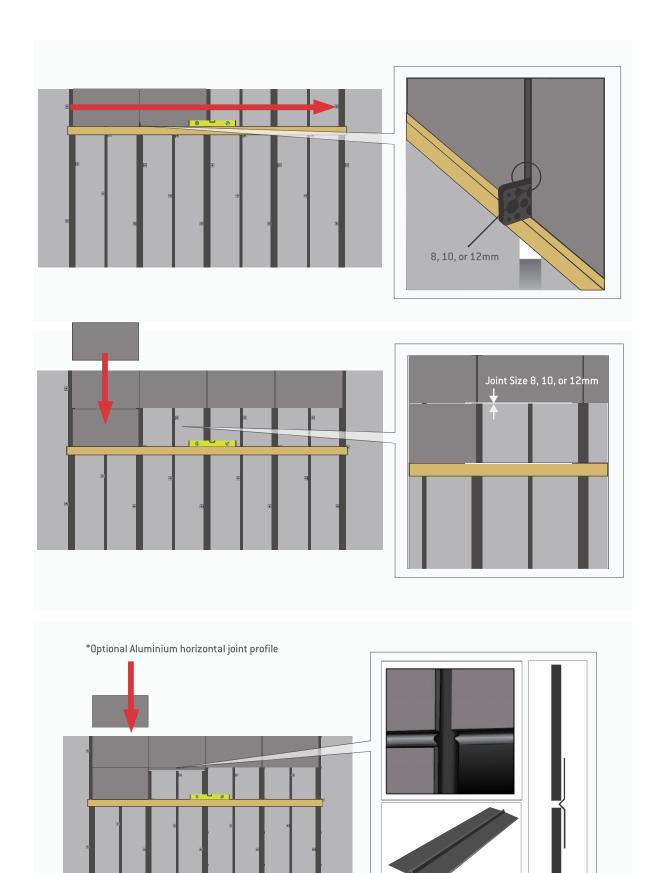

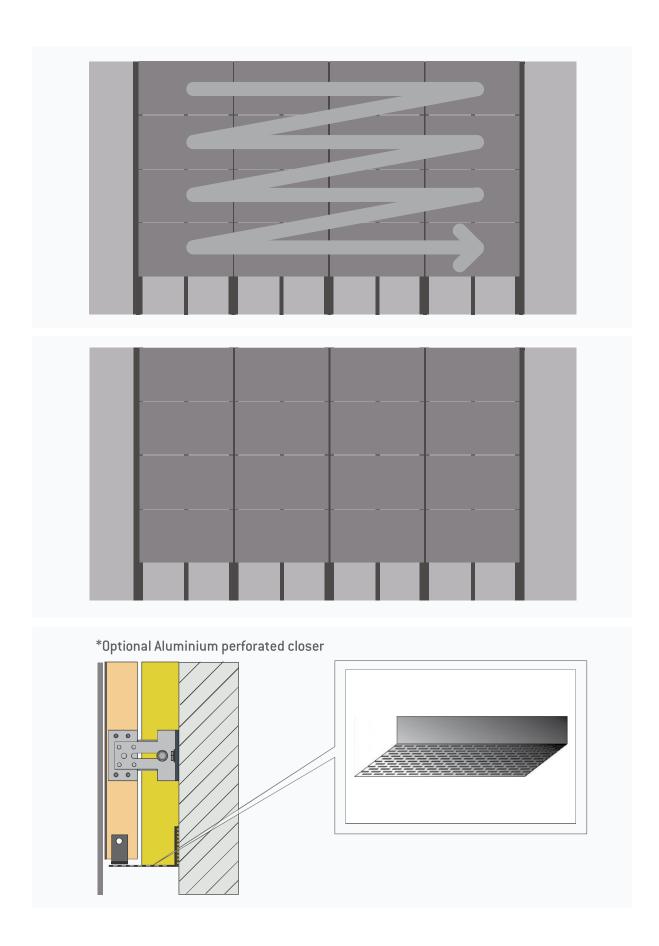

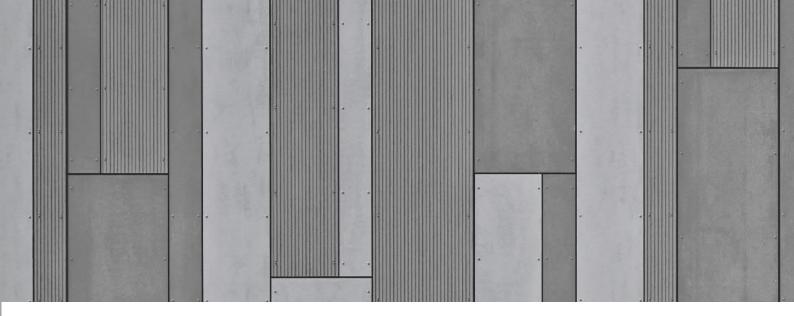



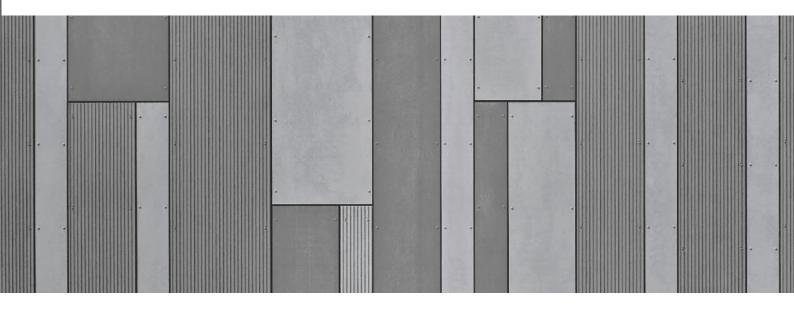

#### equitone.com

Follow us:

equitone facade

equitone facade

Etex Exteriors ANZ Suite 201 198 Harbour Esplanade Docklands VIC 3008 Australia

+61 (03) 9988 2290

info.australia@equitone.com